

Guide to Upgrade from NetProfiler v3.4.9 (or Older) to NetProfiler 4 (Online):

Step 1: Register for My X-Rite Account


Got to [My X-Rite](#) and register for a MyXrite account. This account is required to log in to NetProfiler versions 3.5 and newer.

Step 2: Access NetProfiler Online

Visit the X-Rite [website](#) and click on “NetProfiler Online”.


Step 3: Create a New Profile

On the below screen, click “Create New”.

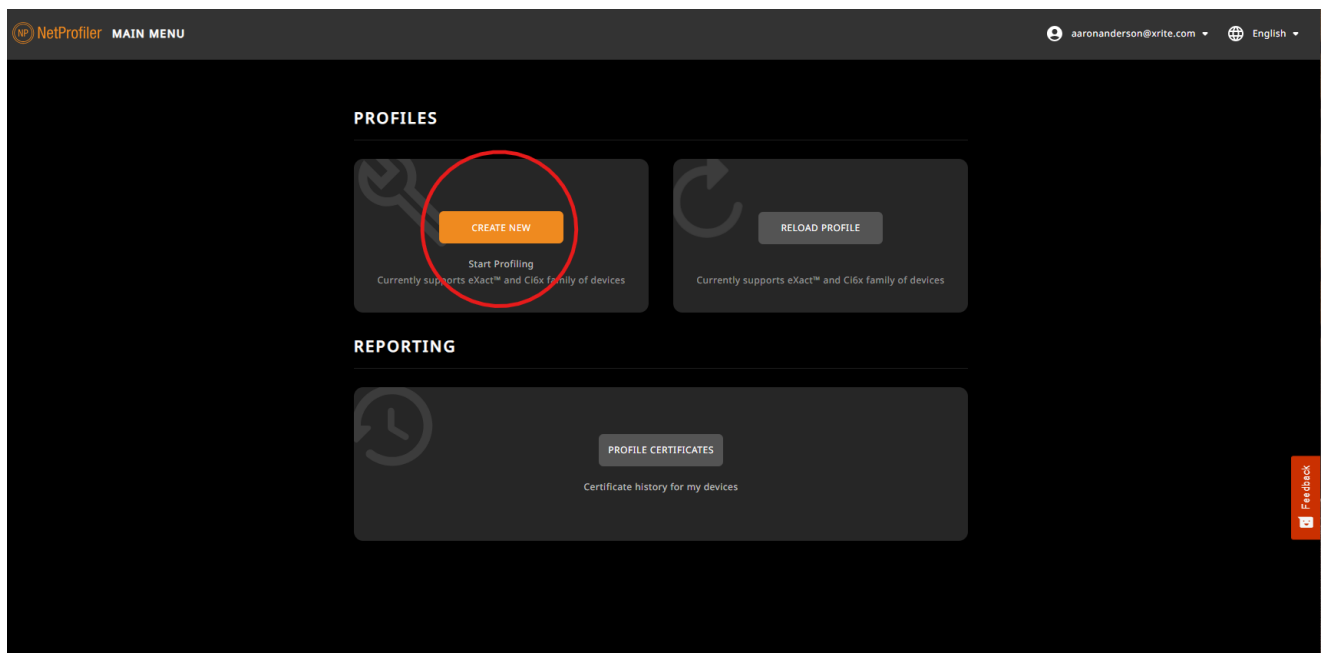


Step 4: Download AuturaNEX Software (If Needed)

If you haven't already installed AuturaNEX, download and install it at this step. Then, launch the AuturaNEX Desktop Application and click “Reconnect” as shown on the screen to reconnect your device.

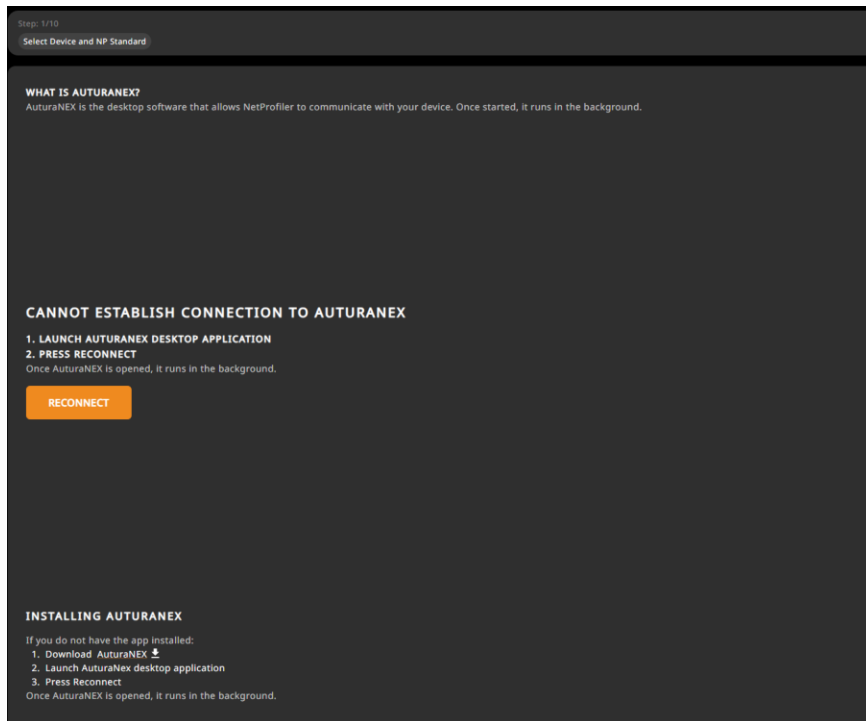


Step 5: Select Your Device

Choose your device from the list provided.

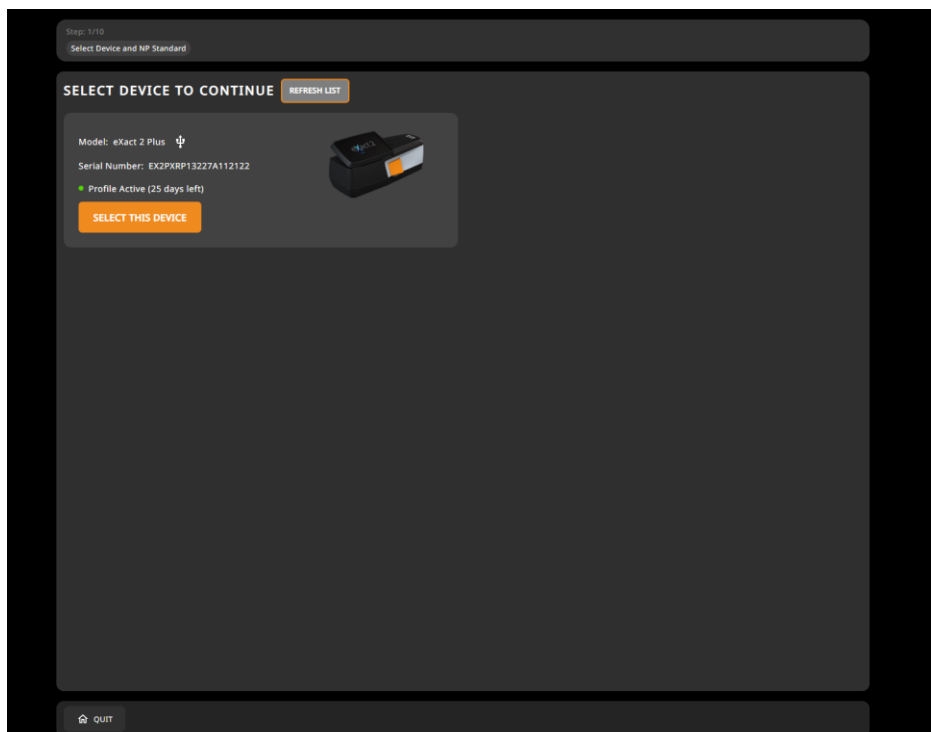

Step 6: Enter NetProfiler Standard Serial Number

Input the Serial Number and click the orange arrow button to proceed to the next step.

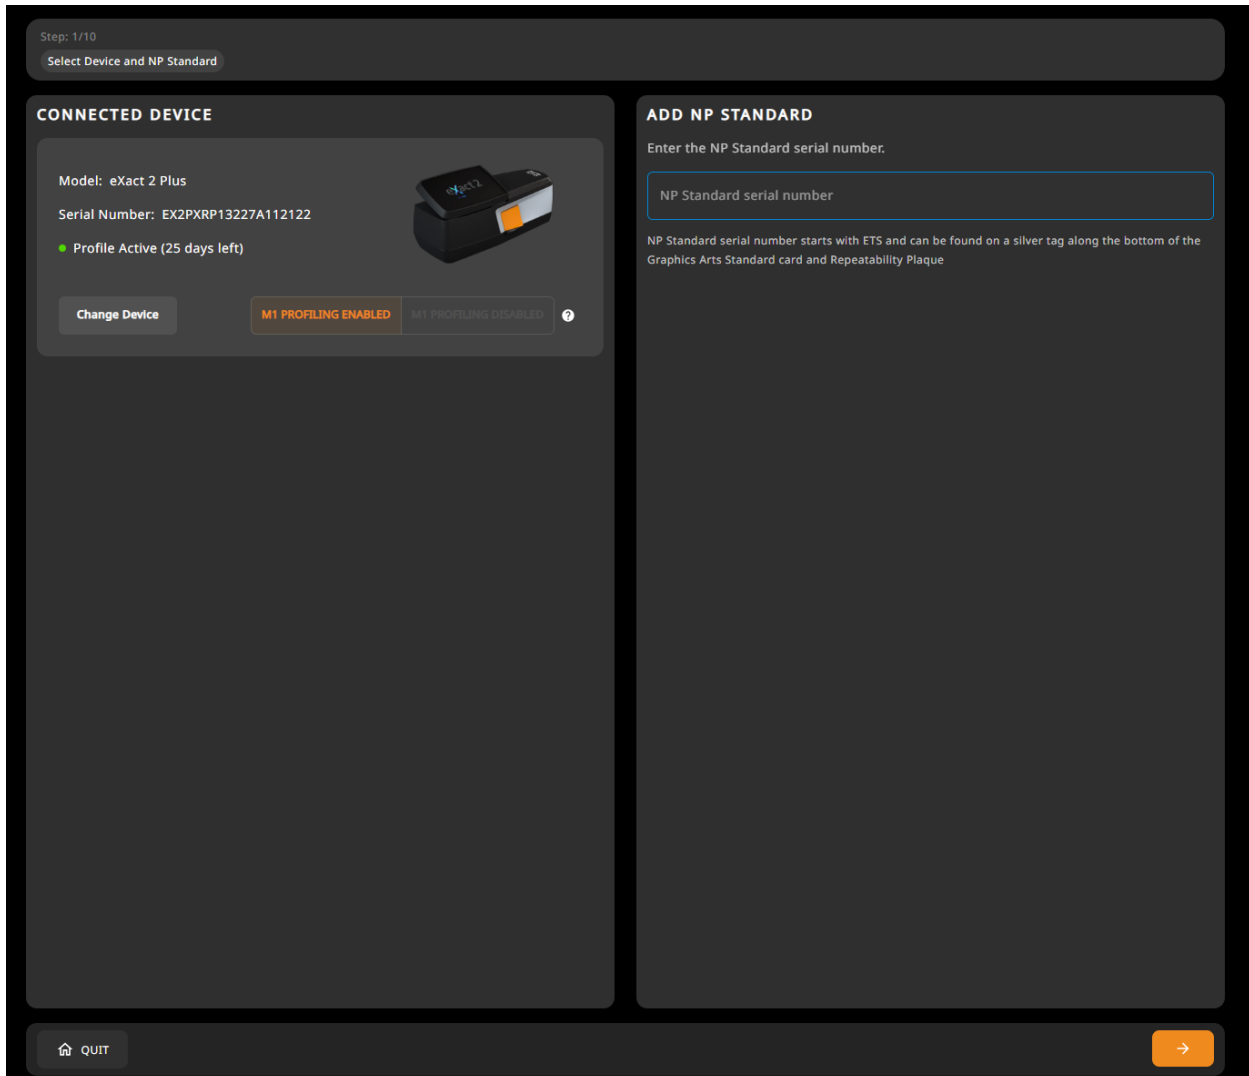

The screenshot shows a software interface with a dark background. At the top, it says "Step: 1/10" and "Select Device and NP Standard". The interface is split into two main panels. The left panel, titled "CONNECTED DEVICE", shows the model "eXact 2 Plus" and serial number "EX2PXP13227A112122". It also indicates "Profile Active (25 days left)". There are three buttons: "Change Device", "M1 PROFILING ENABLED" (highlighted in orange), and "M1 PROFILING DISABLED" with a question mark icon. The right panel, titled "ADD NP STANDARD", has the instruction "Enter the NP Standard serial number." and a text input field containing "NP Standard serial number". Below the input field, it states "NP Standard serial number starts with ETS and can be found on a silver tag along the bottom of the Graphics Arts Standard card and Repeatability Plaque". At the bottom of the screen, there is a "QUIT" button with a home icon and an orange arrow button pointing right.


Step 7: Prepare for Profiling

Ensure that the NetProfiler Standards are clean and that the temperature is stable. Check both boxes to proceed to "Start Profiling."

Step: 1/10
Select Device and NP Standard

CONNECTED DEVICE

Model: eXact 2 Plus
Serial Number: EX2PXR13227A112122
Profile Active (25 days left)



[Change Device](#) **M1 PROFILING ENABLED** M1 PROFILING DISABLED ?

NP STANDARD

REVIEW NP STANDARD

Serial Number	Uses Remaining	Expires:	
ETS00065	13	12/22/2024	Change Standard

Using this NP standard will reduce the remaining uses by 1.

- NP Standard is clean and the temperature is stable. ?
- I understand, that any existing profile on the device will be disabled after starting the profiling process. The profile will not be automatically re-enabled on the device if the process is interrupted or internet connection is lost.

[QUIT](#) [START PROFILING](#)

Step 8: Complete Profiling

Follow steps 2-10 in NetProfiler 4 Online to create new profile.